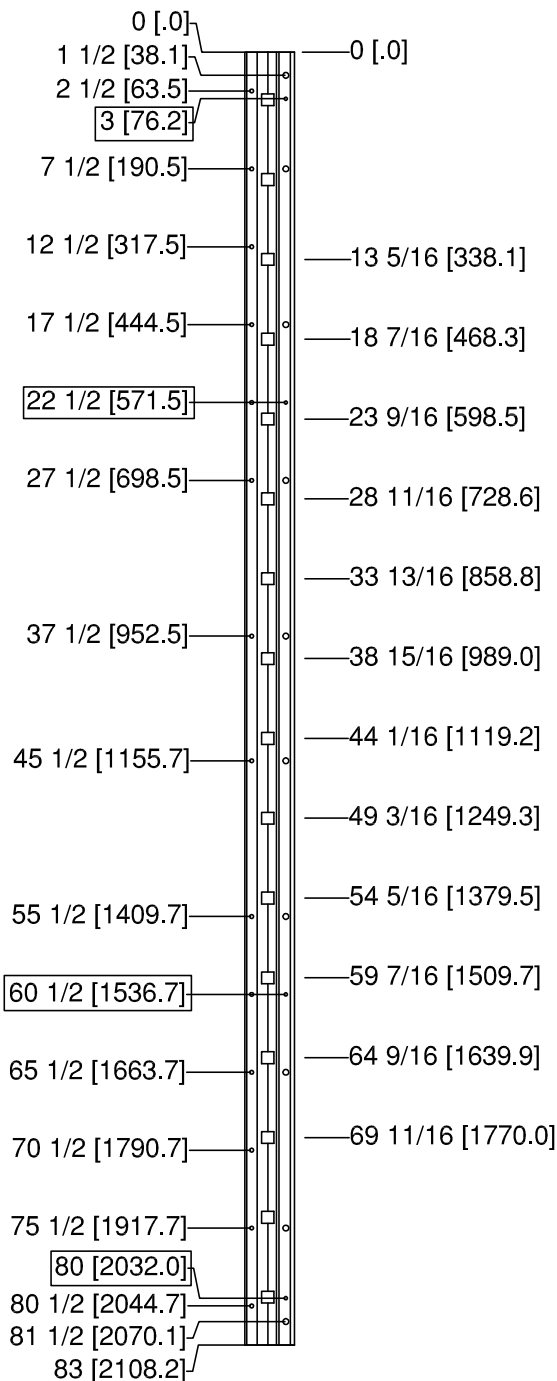
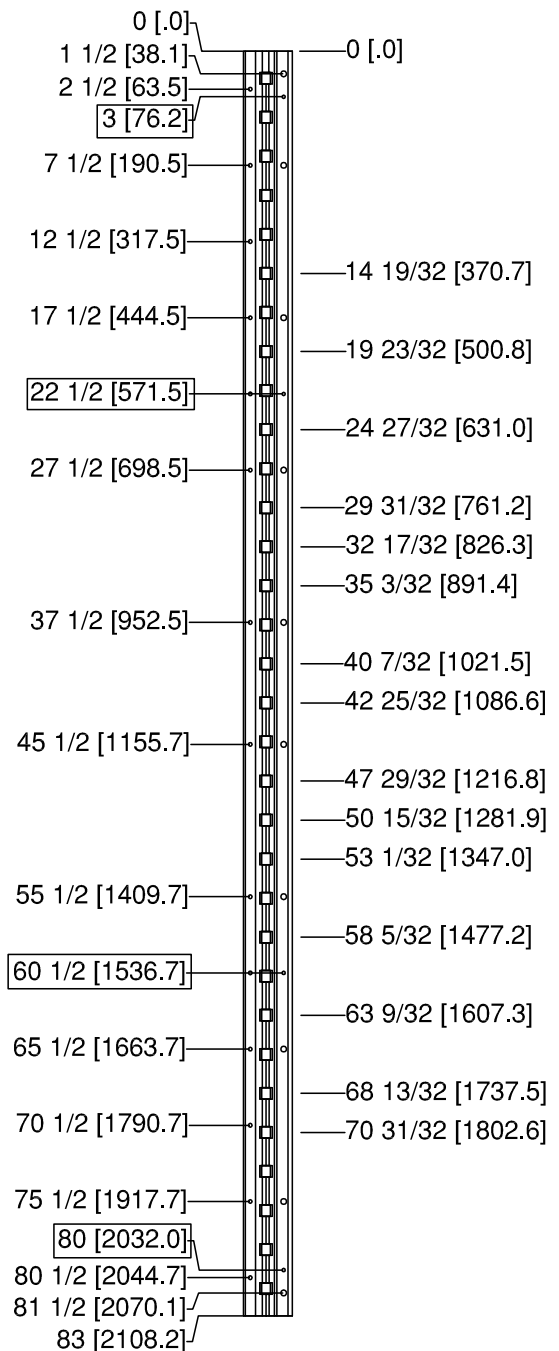


- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Dimensions shown inside boxes  are locator screw mounting holes.
- Choose location(s) for CTW prep(s) on SL57s from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.

**For 83" SD  
Models SL21, SL57**
**24 fasteners / SD:16 bearings / HD:32 bearings**
**HOLE LOCATIONS**
**BEARING LOCATIONS**

**For 83" HD  
Models SL21, SL57**
**24 fasteners / SD:16 bearings / HD:32 bearings**
**HOLE LOCATIONS**
**BEARING LOCATIONS**


# TEMPLATES

## Full Surface Geared Hinges




- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Dimensions shown inside boxes  are locator screw mounting holes.
- Choose location(s) for CTW prep(s) on SL57s from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.

### For 85" SD Models SL21, SL57

24 fasteners / SD:16 bearings / HD:32 bearings


**HOLE LOCATIONS      BEARING LOCATIONS**

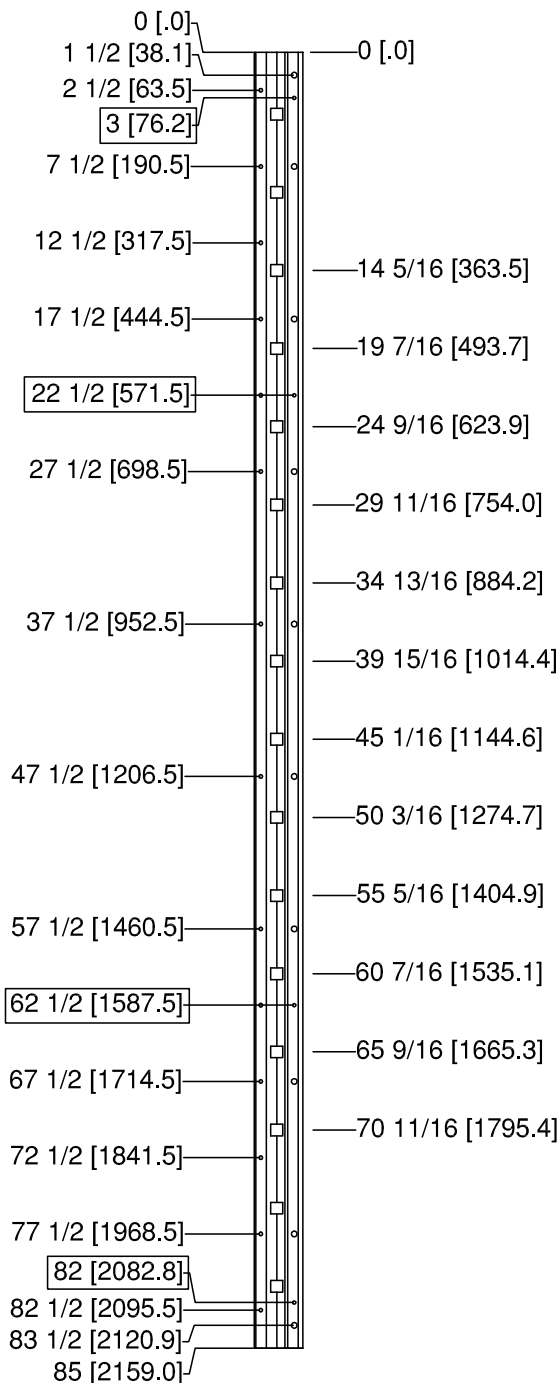



### For 85" HD Models SL21, SL57

24 fasteners / SD:16 bearings / HD:32 bearings

**HOLE LOCATIONS      BEARING LOCATIONS**

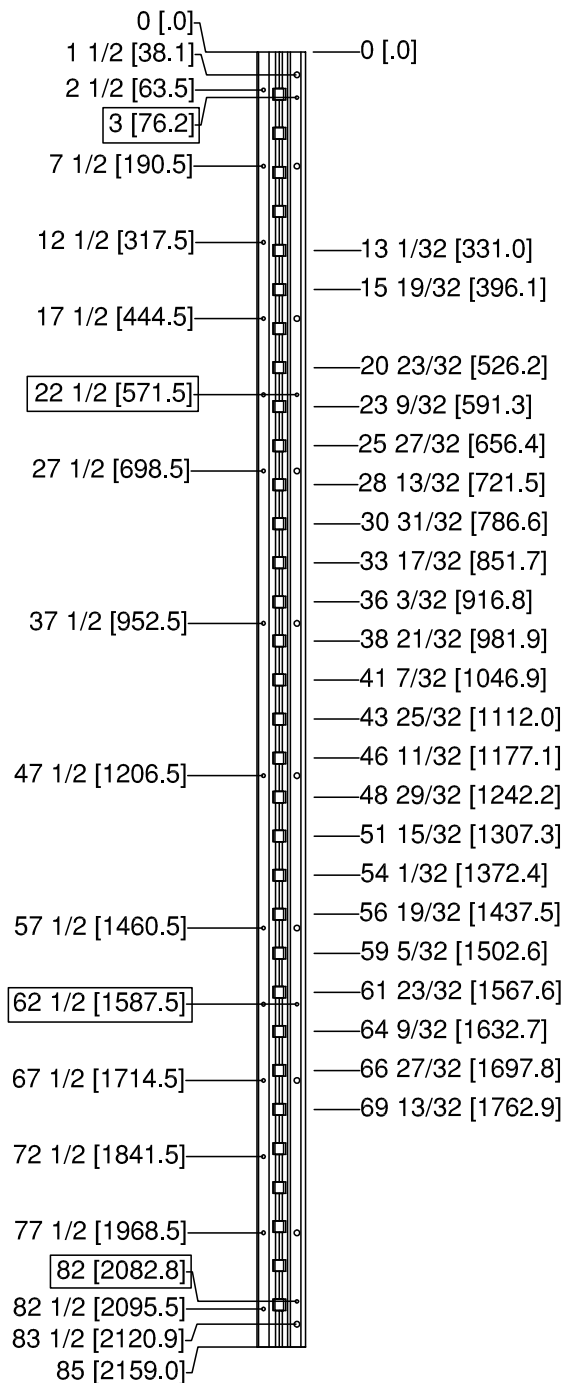

- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Dimensions shown inside boxes  are locator screw mounting holes.
- Choose location(s) for CTW prep(s) on SL57s from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.

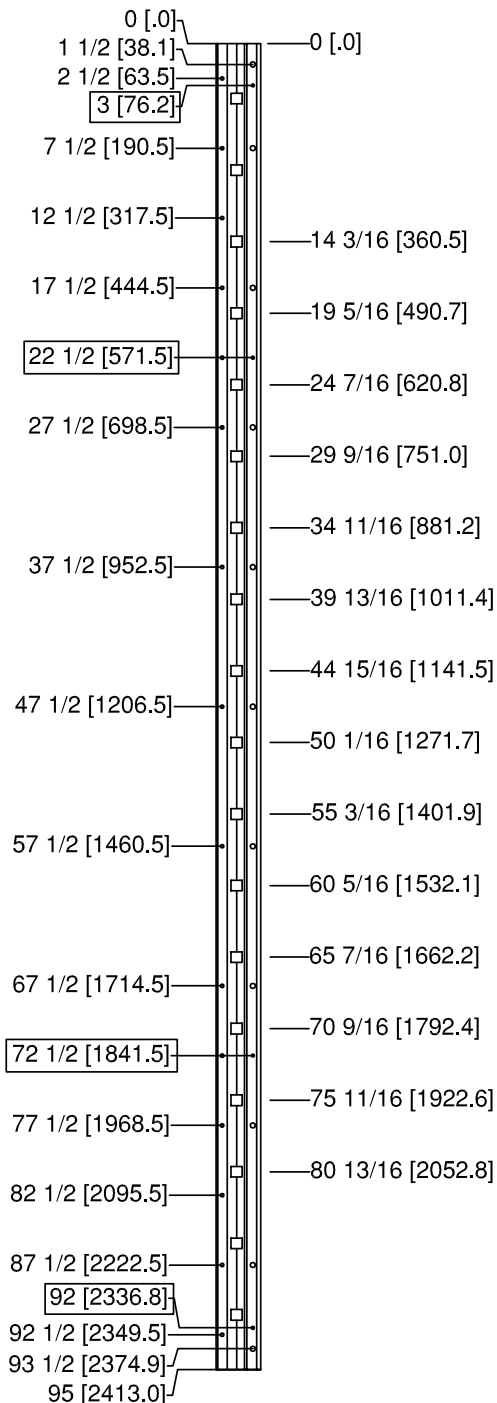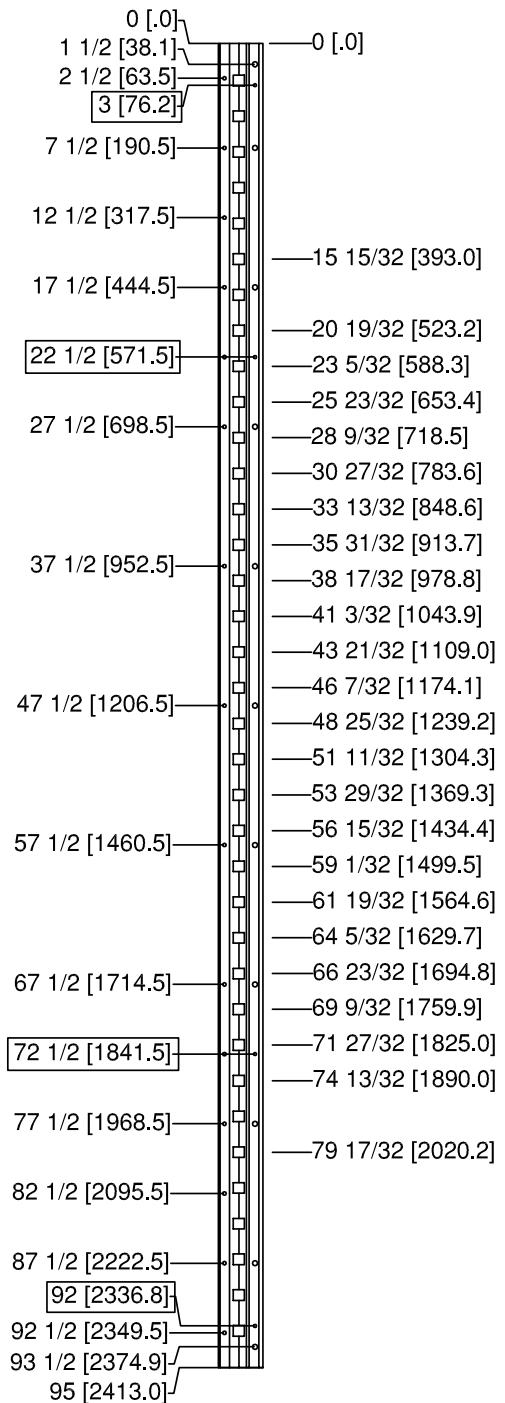**For 95" SD  
Models SL21, SL57**
**26 fasteners / SD:18 bearings / HD:36 bearings**
**HOLE LOCATIONS**
**BEARING LOCATIONS**

**For 95" HD  
Models SL21, SL57**
**32 fasteners / SD:23 bearings / HD:47 bearings**
**HOLE LOCATIONS**
**BEARING LOCATIONS**


# TEMPLATES

## Full Surface Geared Hinges




- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Dimensions shown inside boxes  are locator screw mounting holes.
- Choose location(s) for CTW prep(s) on SL57s from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.

### For 120" SD Models SL21, SL57

26 fasteners / SD:18 bearings / HD:36 bearings

#### HOLE LOCATIONS      BEARING LOCATIONS

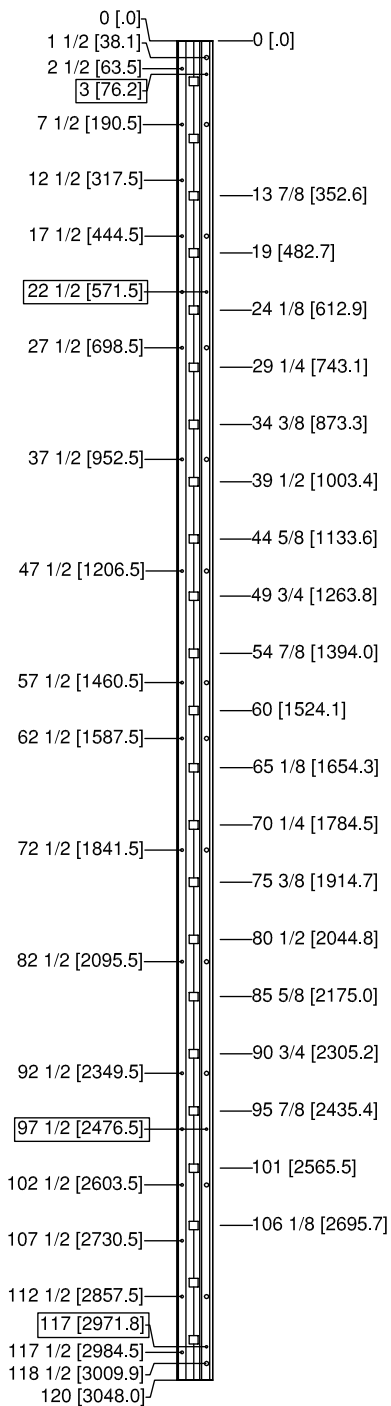

### For 120" HD Models SL21, SL57

32 fasteners / SD:23 bearings / HD:47 bearings

#### HOLE LOCATIONS      BEARING LOCATIONS

