


- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Dimensions shown inside boxes are locator screw mounting holes.
- Choose location for the CTW4 or CTW5 prep on the SL57HD from bearing slots dimensioned. CTW4 = 1 location; CTW5 = 1 location.

**For 83" SD
Models SL21, SL57**

24 fasteners / 16 bearings


HOLE LOCATIONS BEARING LOCATIONS

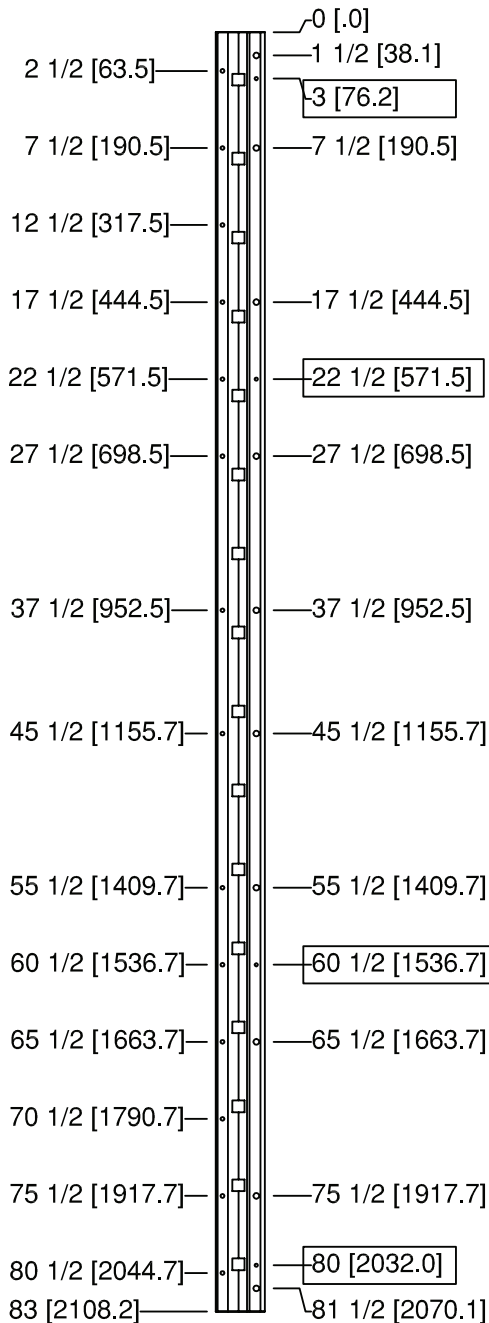

**For 83" HD
Models SL21, SL57**

24 fasteners / 32 bearings

HOLE LOCATIONS BEARING LOCATIONS

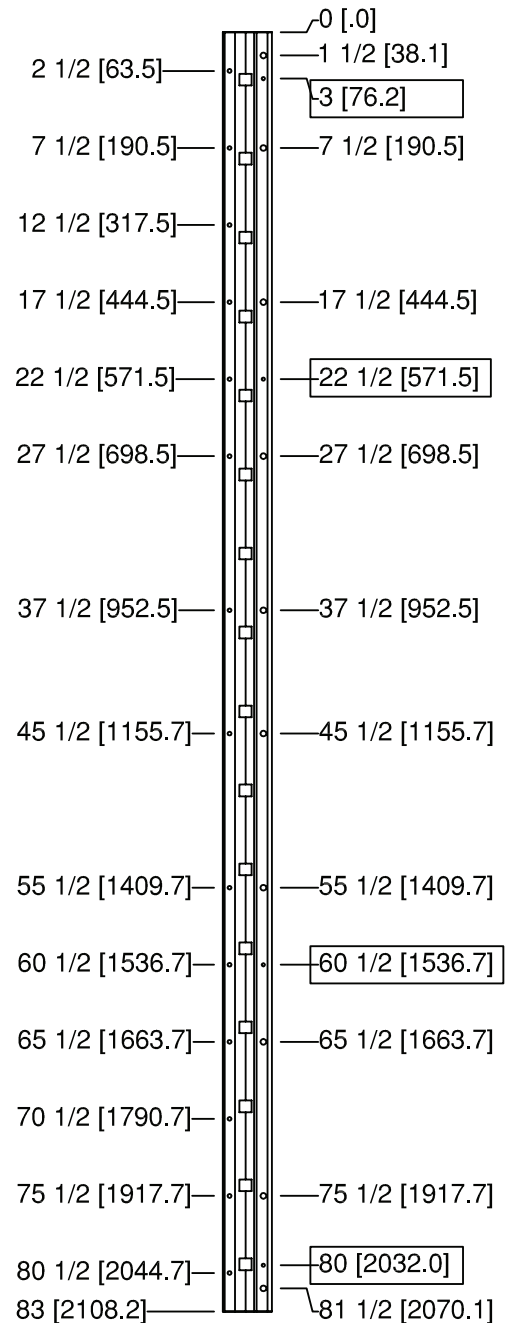

TEMPLATES

Full Surface Geared Hinges




- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Dimensions shown inside boxes are locator screw mounting holes.
- Choose location for the CTW4 or CTW5 prep on the SL57HD from bearing slots dimensioned. CTW4 = 1 location; CTW5 = 1 location.

For 85" SD Models SL21, SL57

24 fasteners / 16 bearings


HOLE LOCATIONS BEARING LOCATIONS

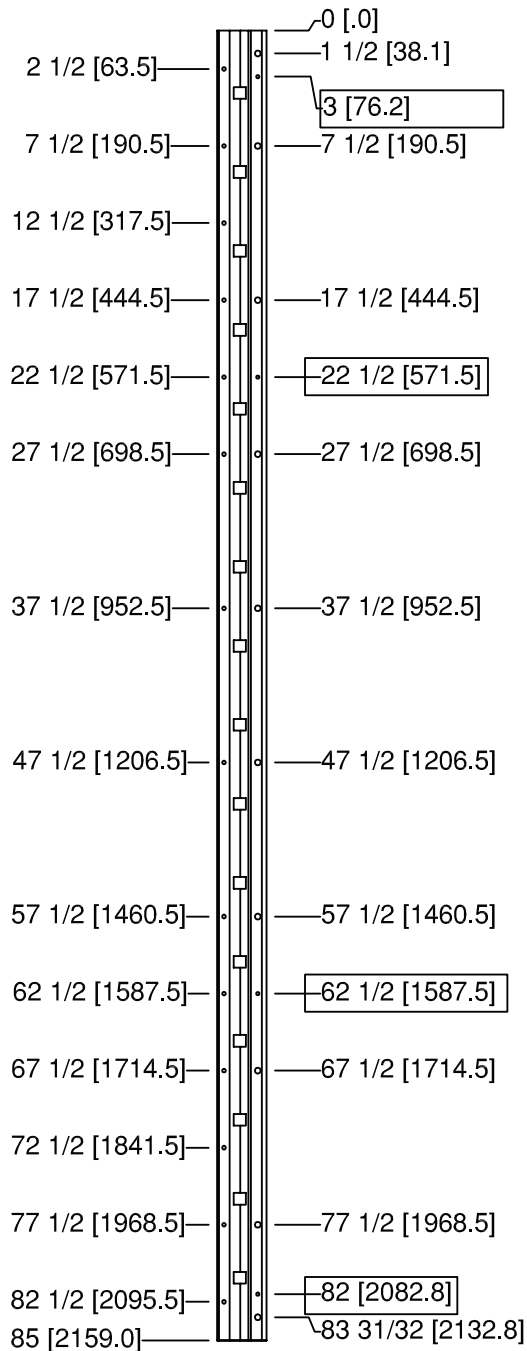

For 85" HD Models SL21, SL57

24 fasteners / 32 bearings

HOLE LOCATIONS BEARING LOCATIONS

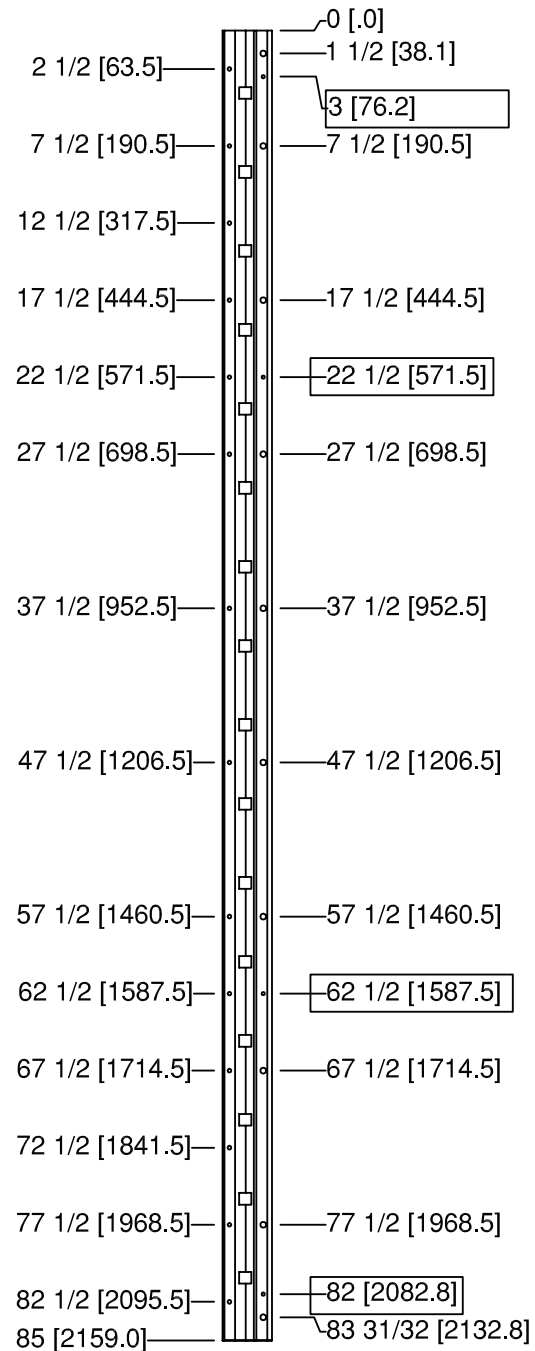


- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Dimensions shown inside boxes are locator screw mounting holes.
- Choose location for the CTW4 or CTW5 prep on the SL57HD from bearing slots dimensioned. CTW4 = 1 location; CTW5 = 1 location.

**For 95" SD
Models SL21, SL57**

26 fasteners / 18 bearings


HOLE LOCATIONS BEARING LOCATIONS

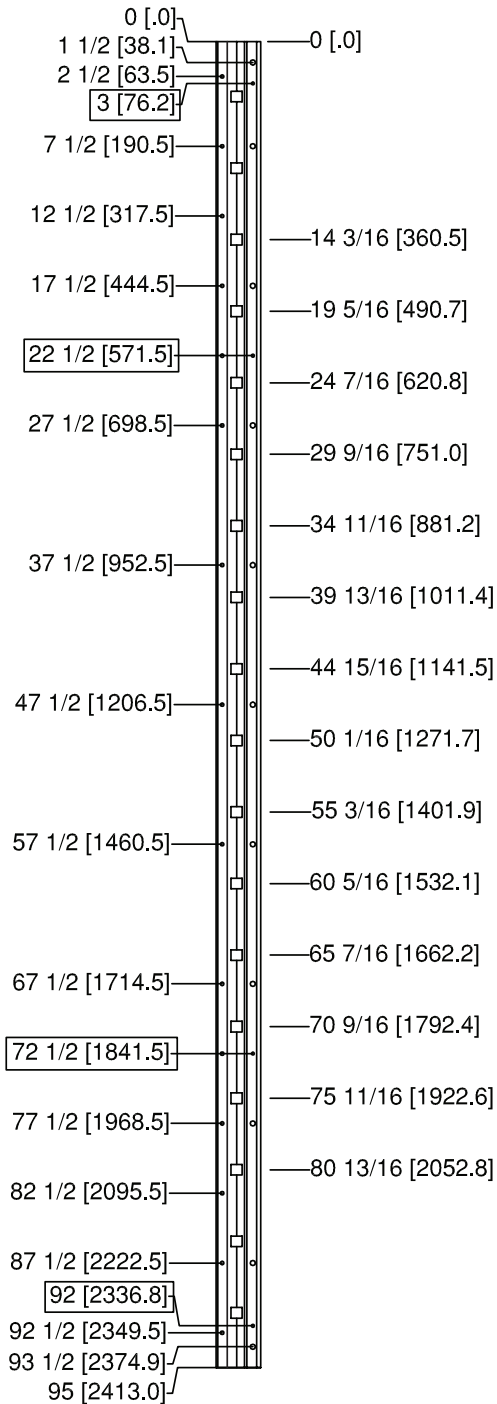

**For 95" HD
Models SL21, SL57**

26 fasteners / 36 bearings

HOLE LOCATIONS BEARING LOCATIONS

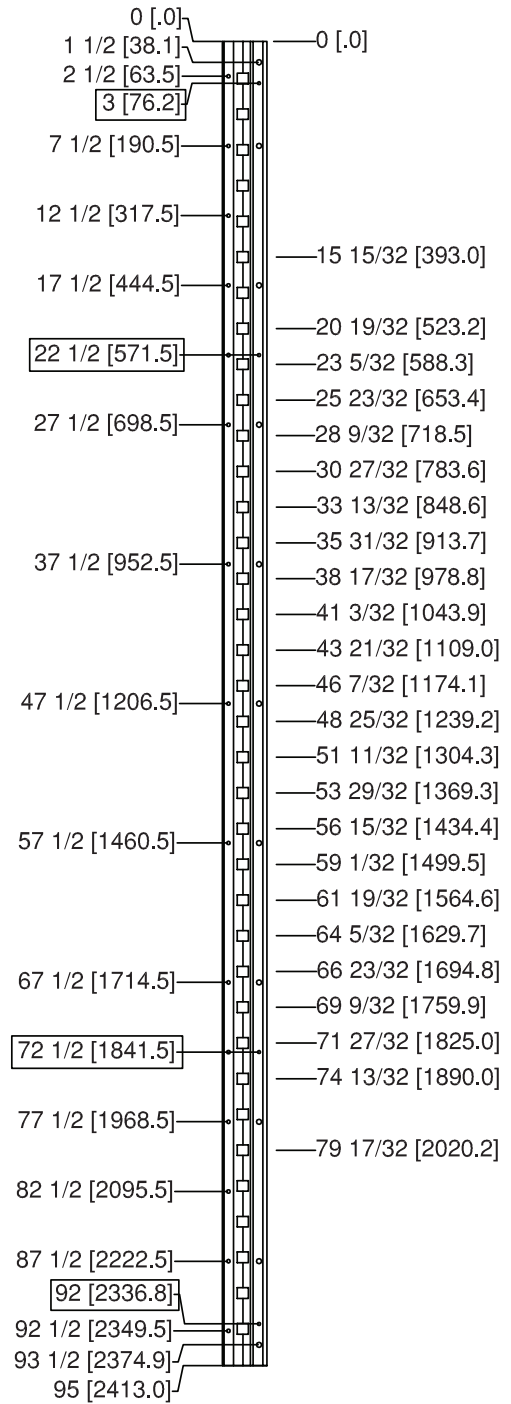

TEMPLATES

Full Surface Geared Hinges




- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Dimensions shown inside boxes are locator screw mounting holes.
- Choose location for the CTW4 or CTW5 prep on the SL57HD from bearing slots dimensioned. CTW4 = 1 location; CTW5 = 1 location.

For 120" SD Models SL21, SL57

32 fasteners / 23 bearings

HOLE LOCATIONS BEARING LOCATIONS

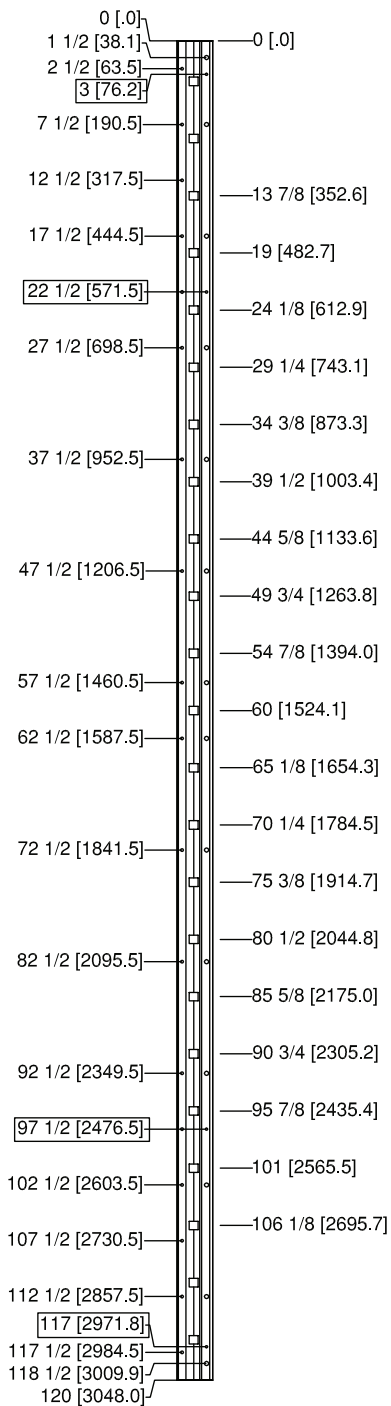

For 120" HD Models SL21, SL57

32 fasteners / 47 bearings

HOLE LOCATIONS BEARING LOCATIONS

