

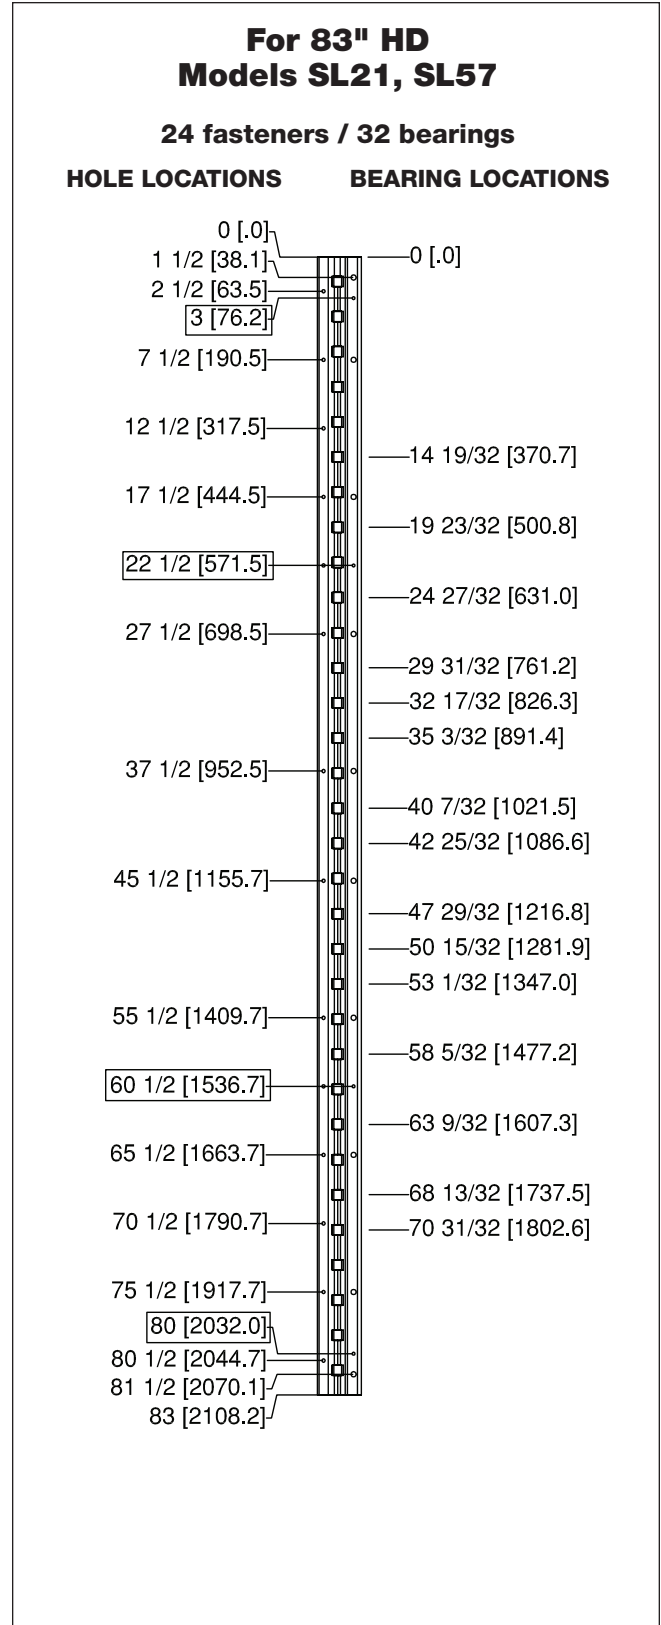
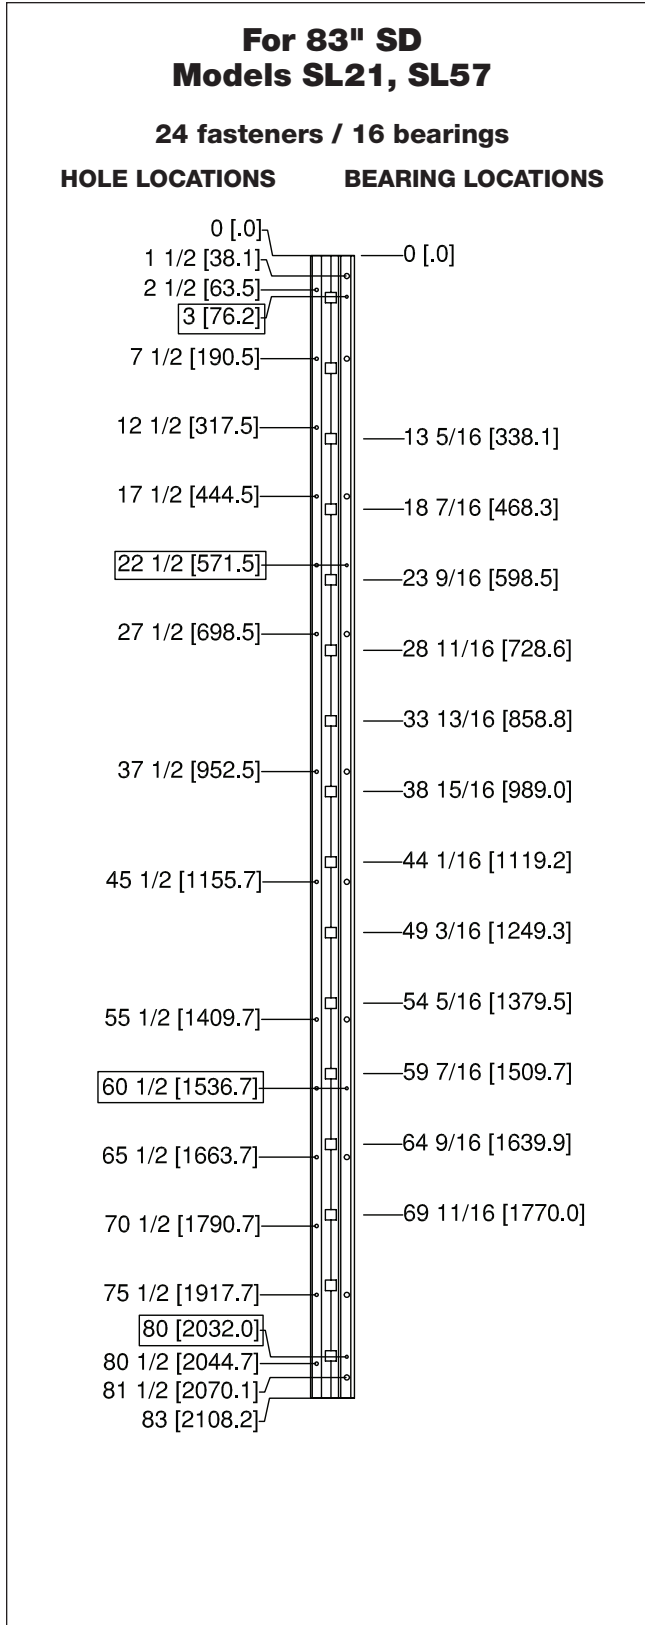


Full Surface Geared Hinges

- All dimensions are measured in inches and [millimeters] from the top of the hinge to the centerline of the holes and bearings.
- Dimensions shown inside boxes are locator screw mounting holes.
- Choose location for CTW prep on SL57 from bearing slots dimensioned. CTW4 = 1 location; CTW5 = 1 location.


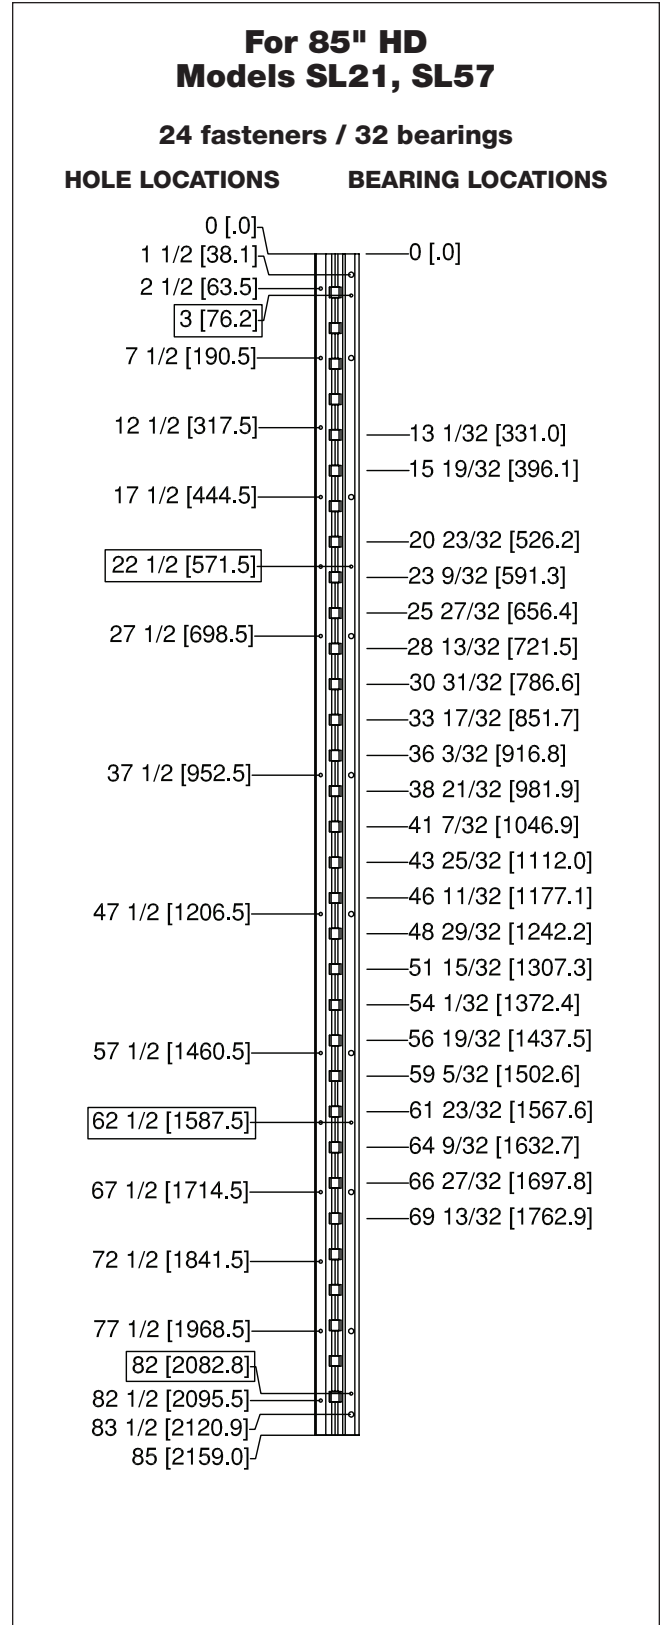


- All dimensions are measured in inches and [millimeters] from the top of the hinge to the centerline of the holes and bearings.
- Dimensions shown inside boxes are locator screw mounting holes.
- Choose location for CTW prep on SL57 from bearing slots dimensioned. CTW4 = 1 location; CTW5 = 1 location.

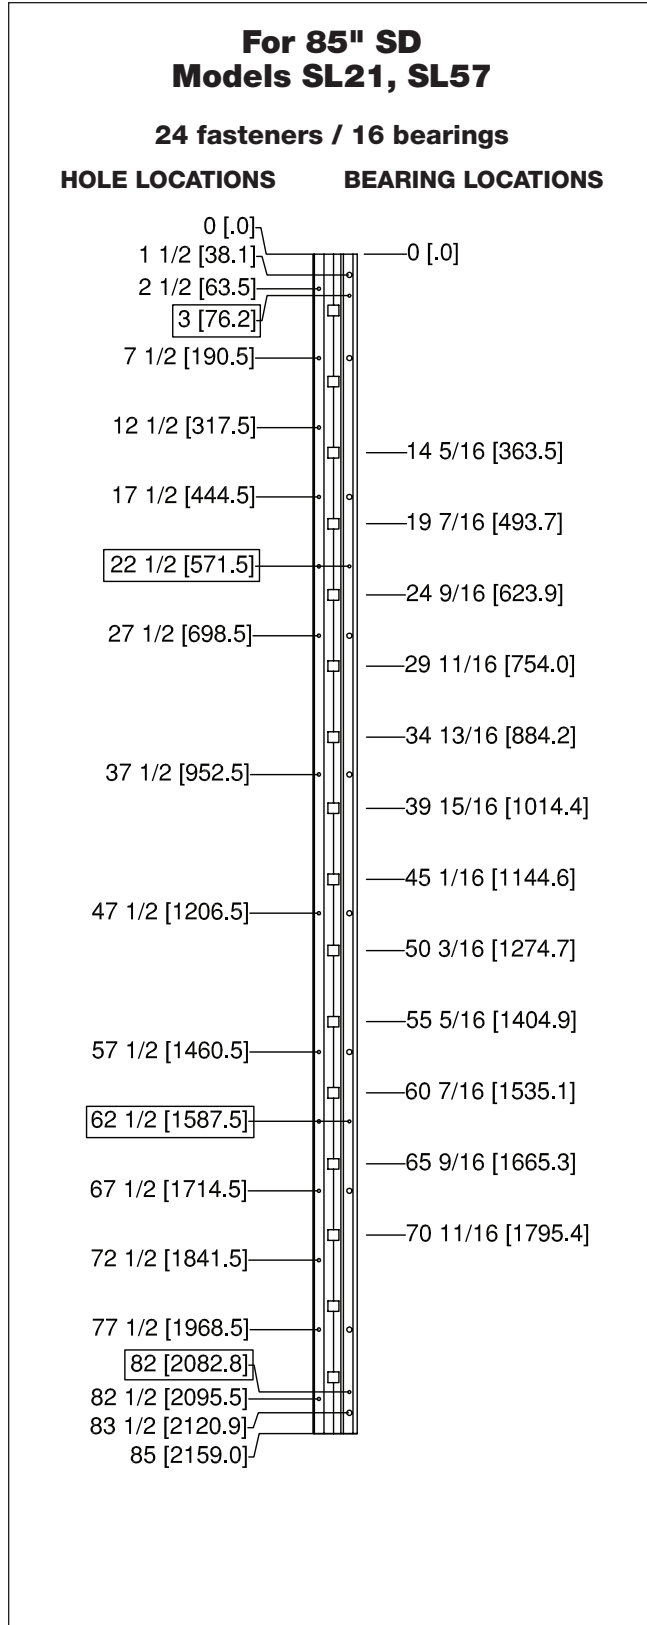

Full Surface Geared Hinges

- All dimensions are measured in inches and [millimeters] from the top of the hinge to the centerline of the holes and bearings.
- Dimensions shown inside boxes are locator screw mounting holes.
- Choose location for CTW prep on SL57 from bearing slots dimensioned. CTW4 = 1 location; CTW5 = 1 location.

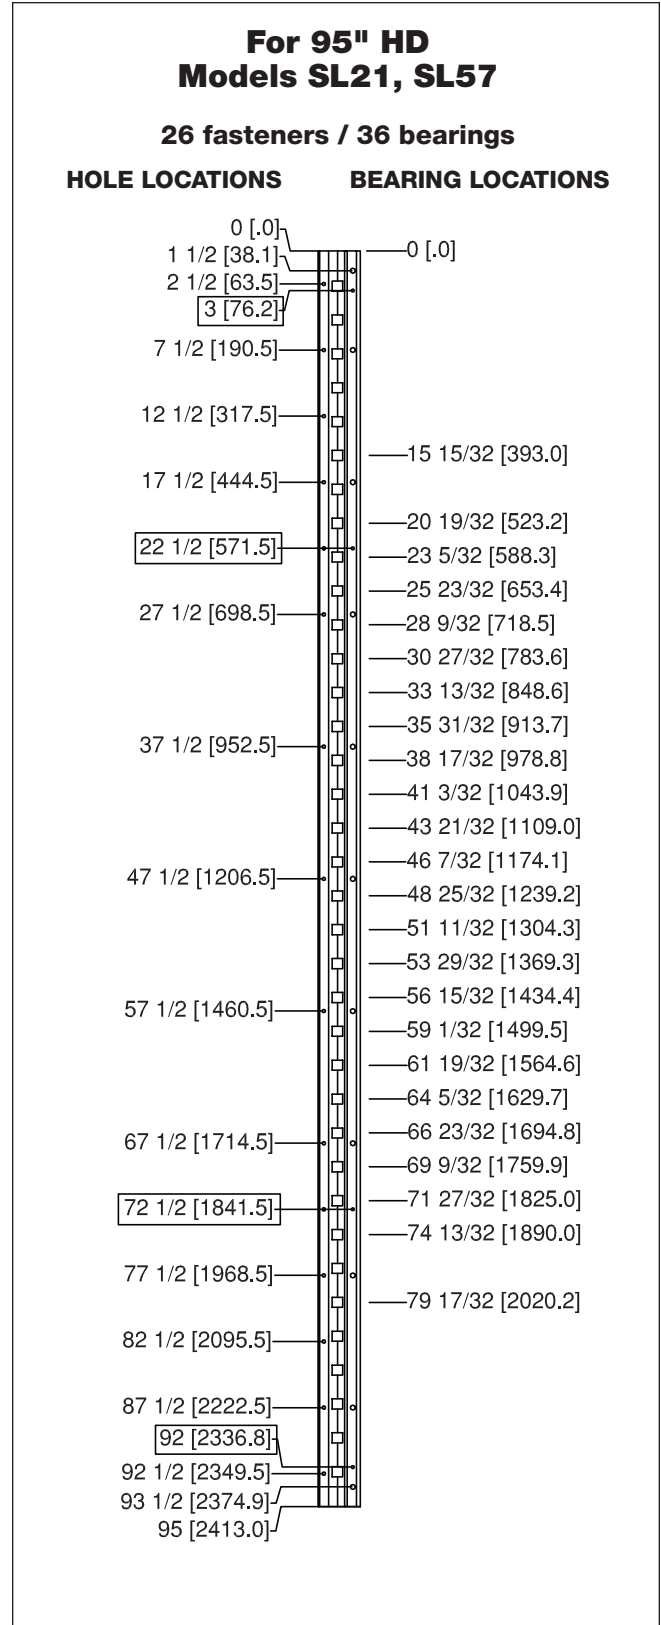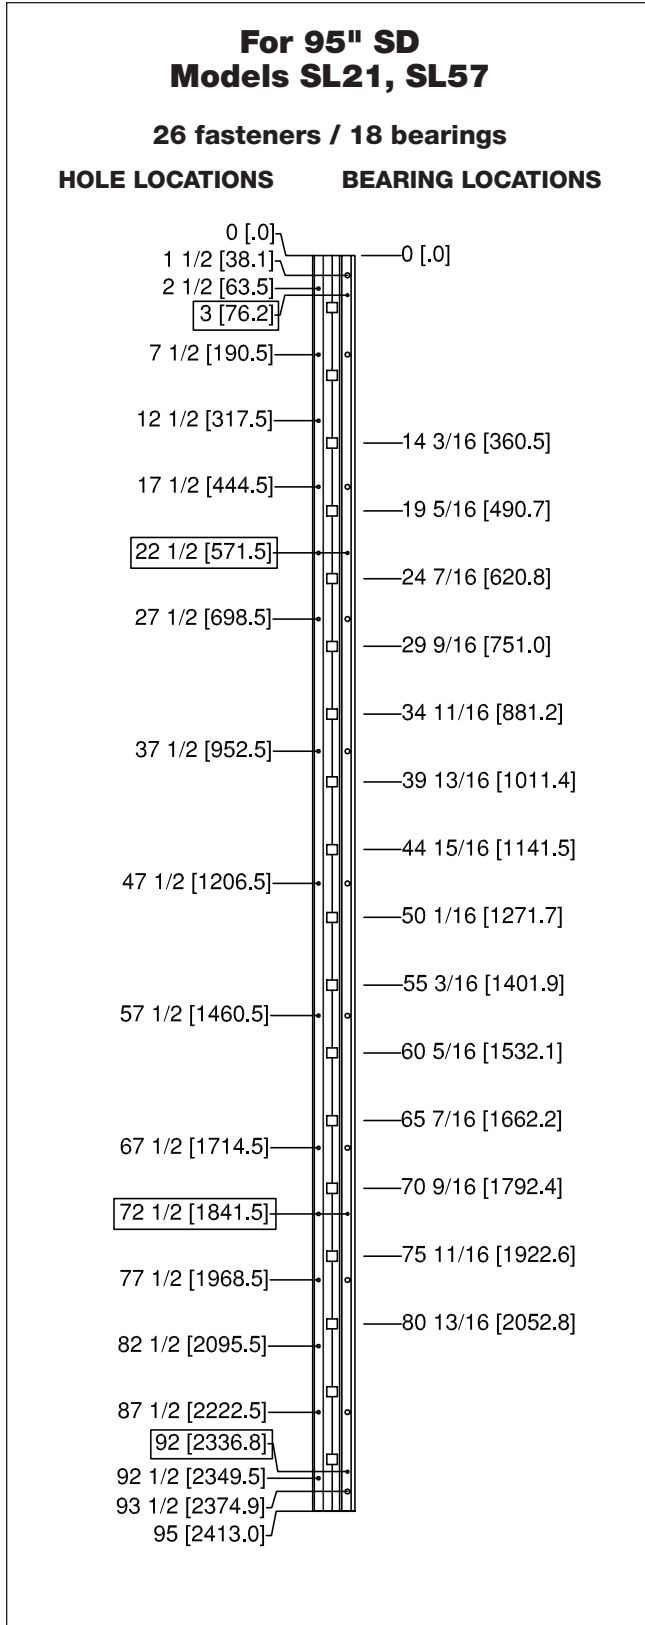

Full Surface Geared Hinges



- All dimensions are measured in inches and [millimeters] from the top of the hinge to the centerline of the holes and bearings.
- Dimensions shown inside boxes are locator screw mounting holes.
- Choose location for CTW prep on SL57 from bearing slots dimensioned. CTW4 = 1 location; CTW5 = 1 location.

